

WilliamArchi Limited

Add: Room606 Aohua business Buiding, Huarong Road, Longhua District, Shenzhen, China Factroy: No. 36 Sanlin Industry Zone, Xiaxi Pingzhou, Nanhai District, Foshan City, China

Email: info@williamarchi.com Whatsapp: +86 13088859386

Web: www.williamarchi.com

WPC WALL | WPC FLOOR



OUR PRODUCTION LINE















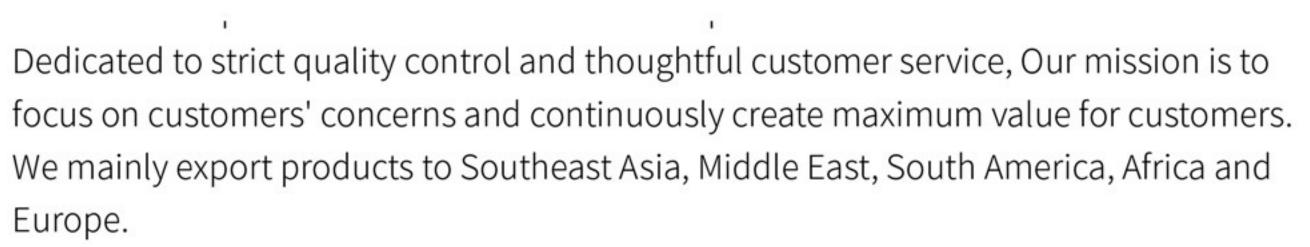

We are specialized in new decoration materials.

Our company has rich experience in the wpc and spc industry.



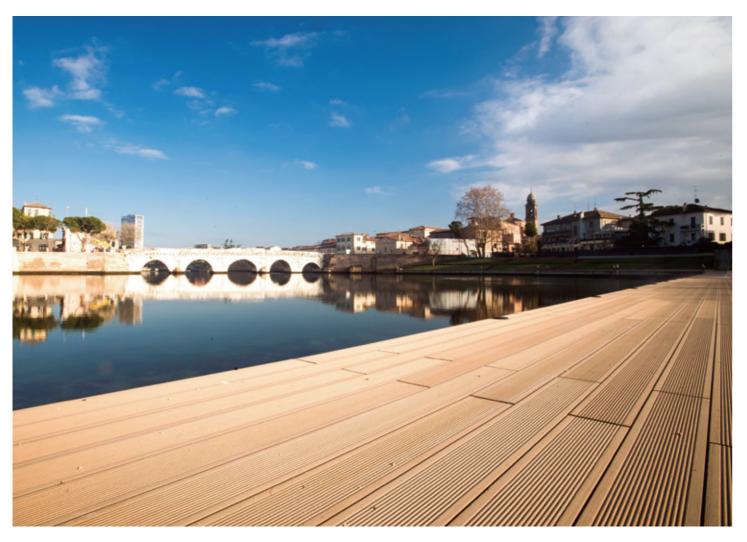

Colors



Surface Treatment –




Grooves Light wood grain Sanding

WPC Classic Decking WTSH-14025A WTRH-14025A WTRH-14025B WTSH-14025B


WTRH-14025C

WTSL-14020C

WTSH-15025C

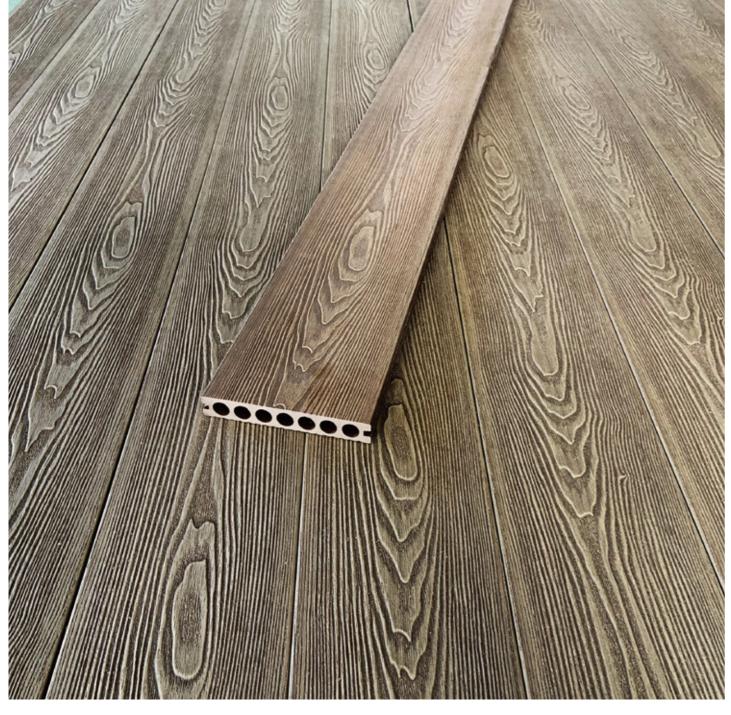



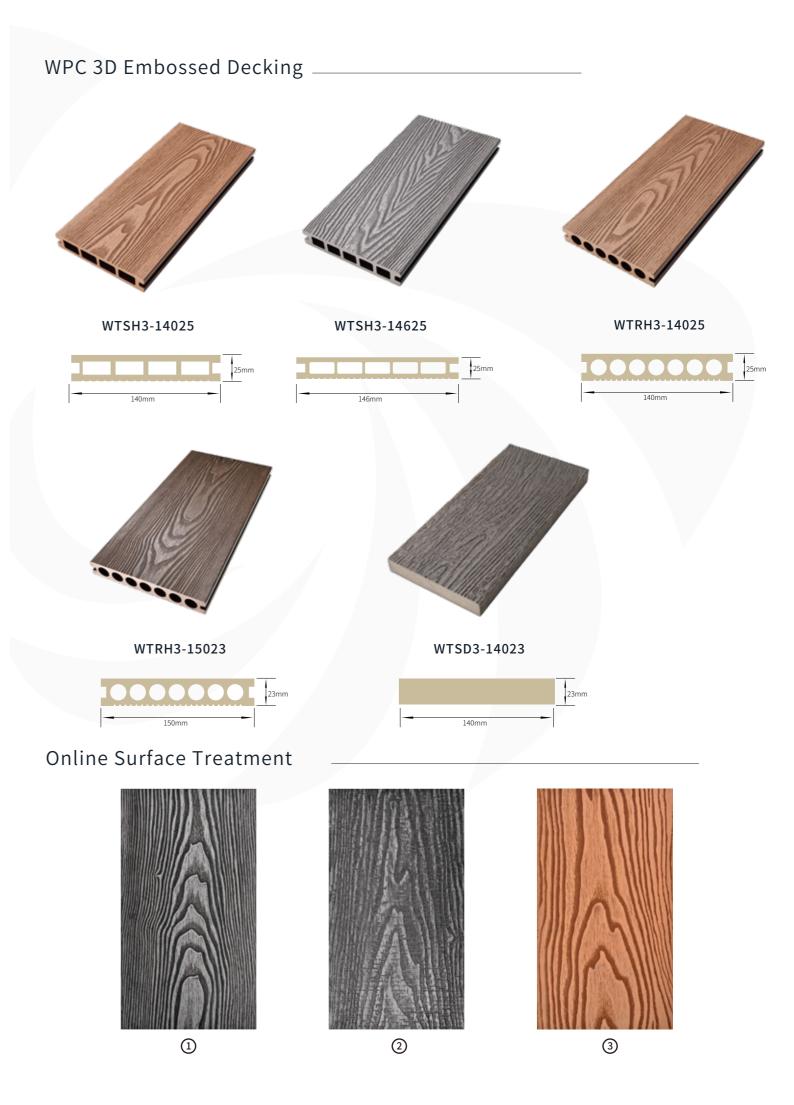






Colors _____




Bicolor Decking _____





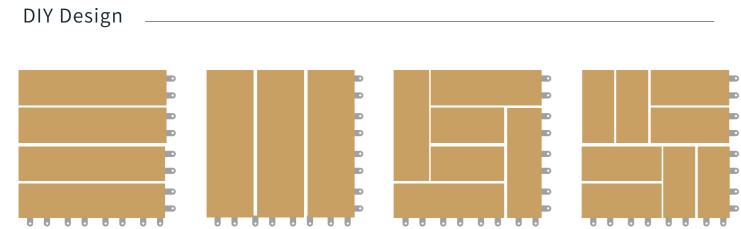



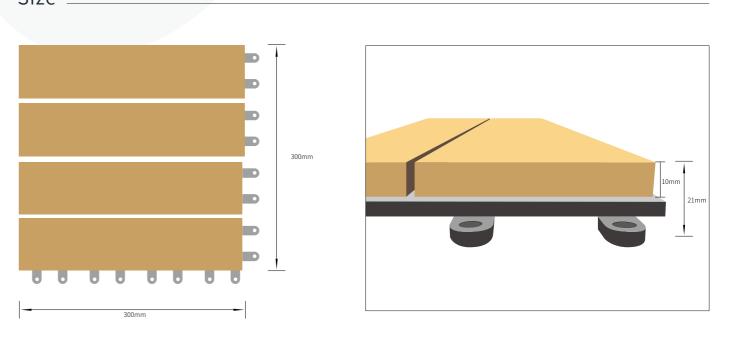


WPC Classic Wall Panel Surface Treatment







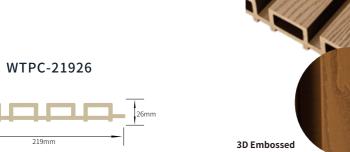

Co-extrusion Wall Panel Surface Treatment












WPC Classic Cladding




WPC Co-extrusion Cladding



Fence Post _____

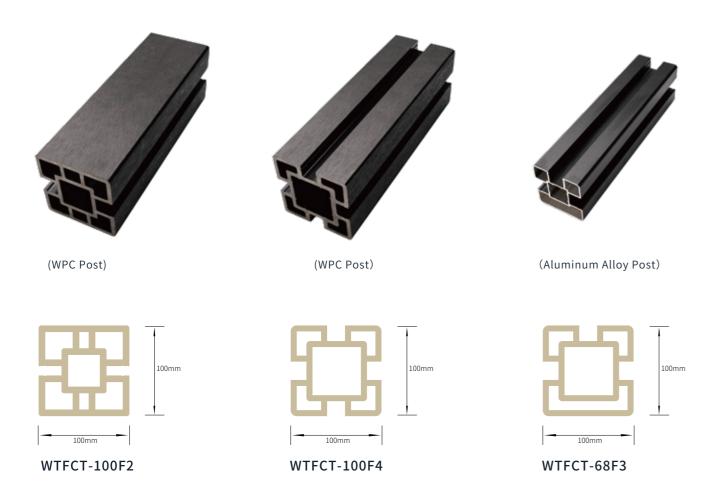


Installation _____

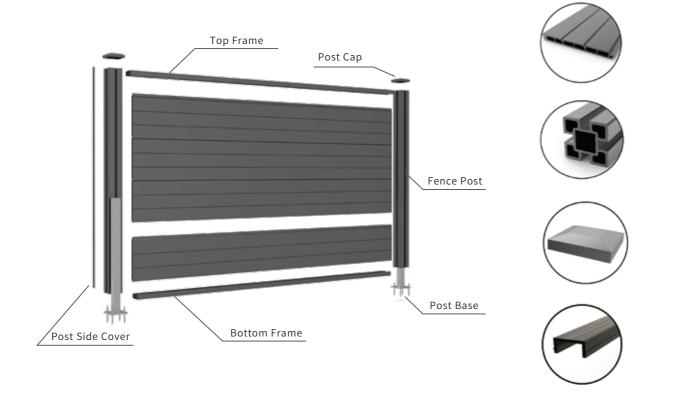

Classic Fence Panel



Co-extrusion Fence Panel

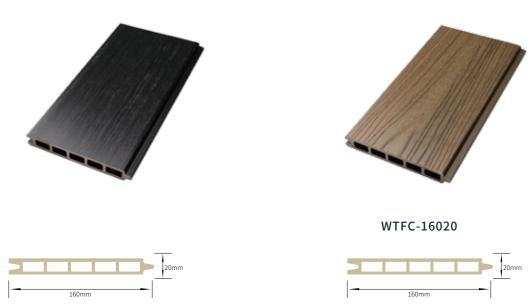

• Decking Accessories














PJKK-03

PJLG-04

• Wall Cladding Accessories







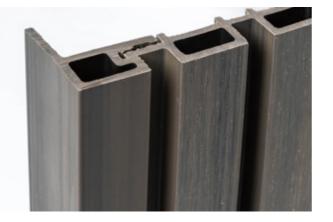


Decking Installation Steps -





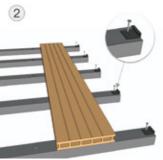


2. Attach the stainless steel starter clip to the end of the WPC joist before starting to lay your WPC decking

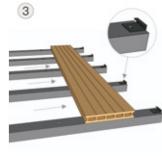


3. Our WPC boards are easily fastened to the joists of a supporting substructure with the help of our stainless steel screw and plastic T-Clip system. Start at the outside of the area to be decked. Place your first board and fix it to each into the process reference of the process. joist it crosses using a row of starter clips.



4.Then fit T-clips into the groove along the side of the board and screw them into the supporting joists with the screws provided, one T-Clip for each supporting joist.

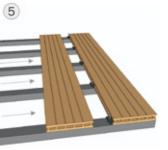

5. Fit your next board by sliding it onto the T-Clips used to secure the first board and fitting another set of T-Clips to secure the opposite side of the board, again one T-Clip for each supporting joist. Follow a similar process to fix subsequent boards.

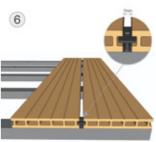

6. At butt joints – where the ends of two decking boards meet, this may mean doubling up on supporting joists as you will need to ensure that each board is held in place with it's own T-Clip where they meet.



7. Having fastened your boards all that remains is to tidy up the sides of your new deck with our WPC skirting and corner trims which can be used to hide the unfinished end of boards and supporting joists.



Our hollow decking end caps are used to seal off the ends of hollow core boards to give your decking a professional finished look, and are available in the same colours as all our composite decking boards. Apply them to neatly complete your decking

Packing and Shipping







